

# Room transmitter stainless steel 4-20 mA

### Article number: 801110 3012

Our stainless steel room transmitter has a 4-20 mA current output and can be mounted using screws. The stainless steel 4-20 mA room transmitter has eight switchable measuring ranges, a stainless steel housing and is suitable for measuring the temperature in indoor areas such as offices, supermarkets and schools.

#### Supply and output

Output	4 - 20 mA
Power consumption	< 1,0 VA / 24 V DC
Voltage supply	15 - 36 V DC
Connection type	2-Wire

#### **General information**

Measuring range	multi-range switching with 8 switchable measuring ranges Operating range: -30 $^\circ$ C to 70 $^\circ$ C with manual zero point correction (± 10 K)
Sensor	Pt1000, DIN EN 60751, Class B
Temperature deviation	typically ± 0.2 K at +25 °C
Load	Ra (Ohm) = (Ub -14 V) / 0,02 A
Process connection	by screws

Housing	
Material	Stainless steel 1.4301   SUS 304
Dimensions (L/W/H) (mm)	75 x 75 x 25
Color	not specified
Electrical connection	0.14 - 1.5 mm <sup>2</sup> , via screw terminals on circuit board

Ambient conditions		
Ambient temperature	-30 °C to +70 °C	
Permissible air humidity	< 95 % r. H., non-precipitating air	
Certifications / Standards		
Protection class	III (nach EN 60 730)	
Protection type	IP 30 according to EN 60 529	
Standards	CE conformity electromagnetic compatibility according to EN 61326 according to EMC Directive 2014/ 30/ EU	

Testo Sensor GmbH

 Testo-Straße 1
 J +49

 D-79853 Lenzkirch
 Lenzkirch

 info@testo-sensor.dewww.testo-sensor.de


Unser Standard-Portfolio finden Sie in unserem Webshop unter: <u>www.testo-sensor.shop</u>





Delivery and Packing	
Delivery	Transmitter, Operating instructions
Packing	individually packed in cardboard box
Article number	801110 3012

#### **Technical drawing**

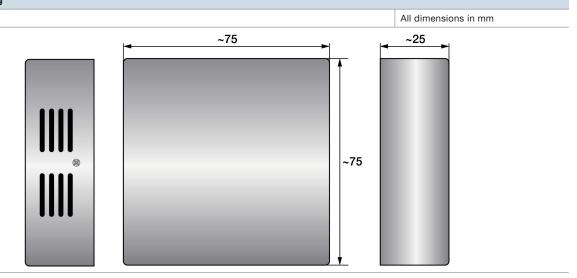



#### Important assembly instructions

For an accurate measurement of the room temperature, it is important to consider the temperature dynamics in the room. Air circulation should only take place through the openings in the housing cover. Therefore, the transmitter should be installed away from objects or obstacles that shield air movement. Please also be sure to avoid uncontrolled air currents (draughts) by installing near doors or windows. In addition, the transmitter should not be mounted on the colder outside wall.

Wall mounting or on flush-mounted box, Ø 55 mm, bottom part with 4-hole, for mounting on vertically or horizontally installed flush-mounted boxes for cable entry at the rear, with predetermined breaking point for cable entry at the top/ bottom for surface-mounted units.

#### **Drilling template**

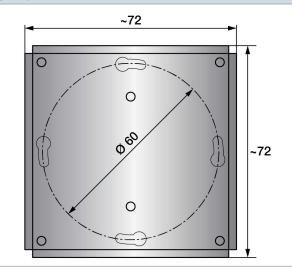

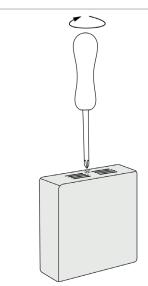


## Testo Sensor GmbH

Testo-Straße 1 D-79853 Lenzkirch  info@testo-sensor.dewww.testo-sensor.de

Unser Standard-Portfolio finden Sie in unserem Webshop unter: <u>www.testo-sensor.shop</u>



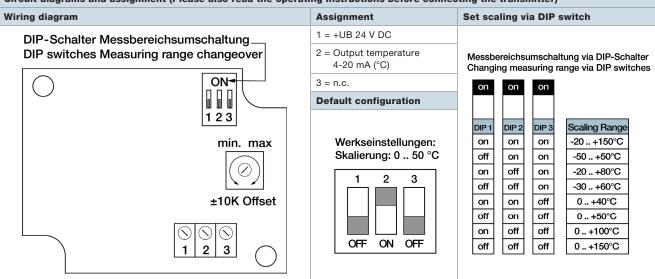

Circuit diagrams and assignment (Please also read the operating instructions before connecting the transmitter)

**Testo Sensor GmbH** 

Testo-Straße 1

 info@testo-sensor.dewww.testo-sensor.de

Unser Standard-Portfolio finden Sie in unserem Webshop unter: <u>www.testo-sensor.shop</u>