


User Manual

Screw-in transmitter G1/2 " M12 connector 4-20 mA

Article number: 807004 0X12

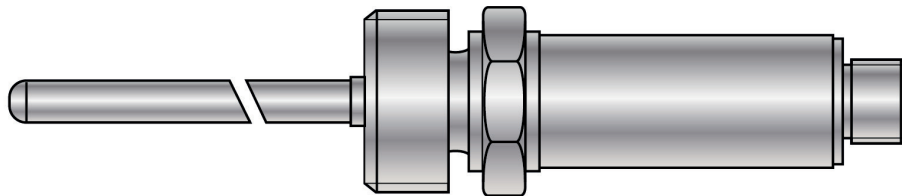

RL / KS / 21.07.2023

All rights reserved. Changes to the documents are not allowed. Please read the operating instructions before starting any work and keep them carefully and to hand.

Testo Sensor GmbH

Testo-Straße 1
D-79853 Lenzkirch

+49 7653 96597-0
+49 7653 96597-99
info@testo-sensor.de
www.testo-sensor.de

Deutsche Bank AG Freiburg | BIC: DEUTDE6FXXX
IBAN: DE32 6807 0030 0184 3333 00
Sparkasse Hochschwarzwald | BIC: SOLADES1HSW
IBAN: DE80 6805 1004 0004 5119 03

Managing Directors:
Prof. Burkart Knospe, Martin Arndt
Amtsgericht Freiburg HRB 706025
VAT ID.: DE274417683

1. Table of content

- 1. General 3
 - 1.1. Security 3
 - 1.2. Intended use 3
 - 1.3. Personnel qualification 3
 - 1.4. Signage, safety labels, type plate 3
- 2. Transport, packaging and storage 4
 - 2.1. Transport, packaging and storage 4
 - 2.2. Original packaging 4
- 3. Commissioning 4
 - 3.1. Assembly 4
 - 3.2. Requirements for achieving the protection class (IP 65) 4
 - 3.3. Drilling template 4
 - 3.4. Pin assignment and configuration of input and output by means of DIP switches 4
 - 3.5. Maintenance 4
 - 3.6. Disposal 4
- 4. Technical data and assembly instructions 5

RL / KS / 21.07.2023

Testo Sensor GmbH

Testo-Straße 1
D-79853 Lenzkirch

+49 7653 96597-0
+49 7653 96597-99
info@testo-sensor.de
www.testo-sensor.de

Deutsche Bank AG Freiburg | BIC: DEUTDE6FXXX
IBAN: DE32 6807 0030 0184 3333 00
Sparkasse Hochschwarzwald | BIC: SOLADES1HSW
IBAN: DE80 6805 1004 0004 5119 03

Managing Directors: **2**
Prof. Burkart Knospe, Martin Arndt
Amtsgericht Freiburg HRB 706025
VAT ID.: DE274417683

1. General

- The product described in the operating instructions is manufactured according to the current state of the art. All components are subject to strict quality and environmental criteria during manufacture. Our management systems are certified according to ISO 9001 and ISO 14001. The GTC in the sales documents apply.
- These operating instructions are an important part of the product. It must be available to qualified personnel and must be carefully read and understood before starting any work. Please be sure to comply with all the safety and handling instructions given. In particular, observe the local accident prevention regulations and general safety regulations applicable to the area of use of the unit.
- The manufacturer's liability expires in the event of damage caused by improper use, non-observance of the instructions, use of insufficiently qualified personnel and unauthorised modifications to the unit
- Subject to technical changes.

1.1. Security

WARNING! Before installation, commissioning and operation, please make absolutely sure that the correct product has been selected with regard to design and specific measuring conditions. Failure to do so may result in serious personal injury and/or damage to property.

- The selection of the products and, in particular, the determination of their suitability for a specific purpose are the sole responsibility of the purchaser, who must also ensure that incorrect planning, operation or installation does not cause any further damage and that compliance with the relevant construction and safety guidelines is observed and guaranteed.
- No liability or warranty is expressly accepted for damage caused by incorrect planning, operation, installation or malfunction of the units.
- The technical data and connection conditions in the supplied installation and operating instructions apply exclusively.
- Please contact us if you need to know more about the specification you require.

1.2. Intended use

- For the intended use of the product, please refer to the technical data and the commissioning instructions in the operating instructions. The unit is designed and built exclusively for the intended use described there and may only be used accordingly. The technical specifications must be observed. Claims due to improper use are excluded.
- This device must not be used for safety-relevant tasks, such as monitoring or protecting persons against danger or injury, as an emergency stop switch on systems or machines, etc.
- This product has been developed, qualified and manufactured to the highest quality standards. Application-specific environmental or stress conditions can influence the behaviour and lead to deviations from the specifications in the data sheet. To avoid this, we recommend application-specific advice.

Application-specific environmental or stress conditions can be in particular:

- Ingress of humidity, which can lead to falsification of measured values
- Vibration, which causes high acceleration forces
- UV irradiation, which can lead to embrittlement of the cable insulation
- Tensile forces acting on the cable, which can damage the probe's internal structure
- Insufficient thermal coupling to the measured medium, with increased response times as a result
- impact with excessively high temperatures, which can change or destroy the built-in measuring resistor or electronic components
- corrosion at the cable ends or the connector contacts, so that measured value falsifications can occur.


1.3. Personnel qualification

WARNING! - Risk of injury due to insufficient professional qualification! Improper handling can lead to considerable personal injury and damage to property.

- The activities described in these operating instructions may only be carried out by adequately qualified personnel. Special operating conditions may require additional, appropriate knowledge, e.g. about aggressive media, possible dangers or country-specific regulations, standards or guidelines. Please keep unqualified personnel away from the danger areas.

1.4. Signage, safety labels, type plate

Our products are marked with a label as follows. (Exemplary representation)

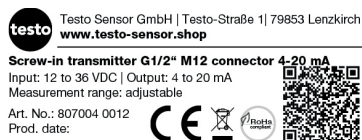

Testo Sensor GmbH

Testo-Straße 1
D-79853 Lenzkirch

+49 7653 96597-0
+49 7653 96597-99
info@testo-sensor.de
www.testo-sensor.de

Deutsche Bank AG Freiburg | BIC: DEUTDE6FXXX
IBAN: DE32 6807 0030 0184 3333 00

Sparkasse Hochschwarzwald | BIC: SOLADES1HSW
IBAN: DE80 6805 1004 0004 5119 03

Managing Directors: **3**
Prof. Burkart Knospe, Martin Arndt
Amtsgericht Freiburg HRB 706025
VAT ID.: DE274417683

2. Transport, packaging and storage

2.1. Transport, packaging and storage

- Transport: Please inspect the unit for any transport damage immediately after delivery. Please notify us immediately of any obvious damage.
- Packaging: Please remove the packaging only immediately before assembly and keep it, as the packaging provides optimum protection during transport.
- Storage: Please refer to the data sheet for permissible temperature and ambient humidity conditions.

The following influences are to be avoided:

- Direct sunlight or proximity to hot objects.
- Mechanical vibration, mechanical shock (hard impact)
- Exposure to soot, steam, dust or corrosive gases
- Explosive environment, flammable atmospheres

2.2. Original packaging

Please store the unit in the original packaging in a place that meets the conditions listed above. If the original packaging is not available, please pack and store the unit as follows

- Wrap the unit in an antistatic plastic sheet.
- Place the unit with the insulation material in the packaging.
- For longer storage (more than 30 days), add a bag of desiccant to the packaging.

3. Commissioning

3.1. Assembly

- The units may only be connected in a de-energised state, only to safety extra-low voltages and only by suitably qualified personnel. The installation instructions in the data sheet must be observed.
- Please observe the safety regulations of the VDE, the federal states, their monitoring bodies, the TÜV and the local EVU.
- Please observe EMC guidelines to prevent damage, faults on the unit or measured value deviations.

3.2. Requirements for achieving the protection class (IP 65)

- Only use the cable gland in the specified clamping range (select the cable Ø to match the cable gland).
- Do not use the lower clamping area when using very soft cable types.
- Only use round cables (a slightly oval cross-section may also be suitable).
- Do not twist the cable.
- Multiple opening/closing is possible, but can have a negative effect on the protection class.
- For cables with pronounced cold flow behaviour, please tighten the screw connection if necessary.

3.3. Drilling template

You will find the drilling template, if available, in the technical data. .

3.4. Pin assignment and configuration of input and output by means of DIP switches

- The units are designed for operation on safety extra-low voltages (SELV). For the electrical connection of the units, the technical data of the units apply. You will find the pin assignment and the configuration of input and output by means of DIP switches in our data sheet on the website.
- The output voltage follows linearly to the temperature signal applied to the input and provides a proportional output signal of 0 -10 V.
- Applying the power supply to the output will destroy the unit.
- With the transmitter with 4...20 mA, display and evaluation elements are connected in series in the current loop.
- The transmitter limits the flowing current depending on the input signal. The 4 mA are used for the transmitter's own power supply.

3.5. Maintenance

The product is maintenance-free. Repairs may only be carried out by the manufacturer or by qualified personnel.

3.6. Disposal

The product is to be classified as electrical and electronic equipment, so that it must be disposed of as electrical / electronic waste. Alternatively, you can return the product to us for proper disposal. The product should not be disposed of as household waste. Special treatment for special components may be legally mandatory and ecologically sensible. Please also observe the local legislation applicable to disposal.

Testo Sensor GmbH

Testo-Straße 1
D-79853 Lenzkirch

+49 7653 96597-0
+49 7653 96597-99
info@testo-sensor.de
www.testo-sensor.de

Deutsche Bank AG Freiburg | BIC: DEUTDE6FXXX
IBAN: DE32 6807 0030 0184 3333 00
Sparkasse Hochschwarzwald | BIC: SOLADES1HSW
IBAN: DE80 6805 1004 0004 5119 03

Managing Directors:
Prof. Burkart Knospe, Martin Arndt
Amtsgericht Freiburg HRB 706025
VAT ID.: DE274417683

4. Technical data and assembly instructions

Screw-in transmitter G1/2 " M12 connector 4-20 mA

Article number: 807004 0X12

The precise Pt1000 screw-in transmitter reliably measures temperatures in pipes and vessels. The screw-in thread allows you to insert it safely and easily into the process. It is connected via an M12 connector. The output provides a standardized 4-20 mA output signal. This allows measured values to be transmitted error-free even over long distances. You can select the length of the protection sleeve. Accessories such as immersion sleeves, compression fittings and connection cables are available in our online store.



Special features	
Inputs and outputs	<p>kompakte und robuste Bauweise Compact and robust design</p> <p>Messelement: Pt 1000 Measuring element: Pt 1000</p> <p>Output: 4 - 20 mA Output: 4 - 20 mA</p> <p>Einbaulängen konfigurierbar Mounting length configurable</p> <p>Anschluss über M12 Stecker Connection via M12 plug</p> <p>einfache und sicher Installation easy and safe installation</p>
Input: Pt1000 resistance sensor, permanently installed Output: 4 to 20 mA	
Accuracy and Long-term stability	
Accuracy: high measuring accuracy Long-term stability: long service life with flexible application possibilities	
Alarm function	
Sensor break monitoring Sensor short-circuit monitoring Measuring range monitoring	
Design	
compact, robust, vibration and shock resistant design	
Process safety	
pressure resistant up to screw cap insertion in the process	

Input			
Measuring element	Norm	Configurable measuring range	Accuracy
Pt1000	IEC 60751	-200 °C to +850 °C -328 °F to +1562 °F	±0.5 °C - 1 °C over the entire measuring range
Connection type	2-wire (permanently installed)		

Output		Circuit diagram Output
Output type	analog, temperature linear for RTD	<p>Frontansicht M12 Stecker Front view M12 connector</p>
Output signal	4 to 20 mA	
Parametrization / Scaling	Configurable via DIP-Switch	
Resolution	16 bit dac	
Accuracy (°C)	0,1	
Load	500 Ω at 24 VDC	
Connection type	2-wire	

Sensor monitoring & sensor error		Measured values outside the measuring range	
Sensor failure effects	according to NAMUR NE43	Sensor Status	4 - 20 mA
Alarms		Min. measured value	4 mA
Sensor error	4 - 20 mA	Max. measured value	20 mA
Sensor Status	3,6 mA	Underrange	3,8 mA
Sensor short circuit	21 mA	Overrange	20,5 mA

RL / KS / 21.07.2023

Testo Sensor GmbH

+49 7653 96597-0
 Testo-Straße 1
 D-79853 Lenzkirch
 info@testo-sensor.de
 www.testo-sensor.de

Deutsche Bank AG Freiburg | BIC: DEUTDE6FXXX
 IBAN: DE32 6807 0030 0184 3333 00
 Sparkasse Hochschwarzwald | BIC: SOLADES1HSW
 IBAN: DE80 6805 1004 0004 5119 03


Managing Directors:
 Prof. Burkart Knospe, Martin Arndt
 Amtsgericht Freiburg HRB 706025
 VAT ID.: DE274417683

Time response		Accuracy and stability	
Closing time	~150 - 300	Cold junction compensation	
Signal attenuation	0 – 30	Cold Junction Compensation	±0,3 – 0,5 °C (NTC 5K)
Measuring cycle (s)	<0,25 (<4 Hz)	Temperature influence	±0,01 °C per °C
Response time	Depending on sensor type		

Ambient conditions	
Ambient Temperatur	Storage: -30 °C to +70 °C -22 °F to +158 °C Operating: -50 °C to +150 °C -58 °F to +302 °F
Humidity	0 to 98 (non-condensing)
Protection	IP65

EMC	
Standard	Directive: 2014/30/EU Harmonized standards: EN 61326-1:2013

Type, Protection sleeve, Thread				
Type		Thread		
Dimensions	See drawing	Material	Stainless steel 1.4404 316L	
Material Flammability	Stainless steel 1.4404 316L	Length (mm)	14	
Mounting	via process connection	Thread	G1/2 "	
Connection	M12	Wrench size	27	
Weight (g)	0			
Protection sleeve				
Material	Stainless steel 1.4404 316L			
Diameter (mm)	6			
Please select the appropriate length of the protection sleeve				
Mounting length (mm)	50	100	150	200
Article number	807004 0112	807004 0212	807004 0312	807004 0412

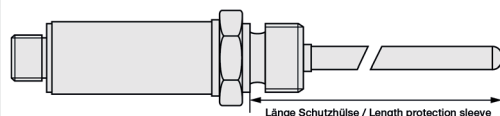

Matching accessories	
DIN rail power supply	On request
Table power supply	On request
Matching connection cables	in the Webshop: testo-sensor.shop
Suitable mounting flanges	in the Webshop: testo-sensor.shop
Matching immersion sleeves	in the Webshop: testo-sensor.shop
Suitable compression fittings	in the Webshop: testo-sensor.shop

Factory configuration	
Input	Pt1000 fixed
Scaling	0 °C to +100 °C

General data	
Isolation	none
Supply Voltage (VDC)	12 to 36, polarity protected

Delivery	
Transmitter, Instruction manual, individually packed in PE bag	

RL / KS / 21.07.2023

Testo Sensor GmbH

Testo-Straße 1
D-79853 Lenzkirch

+49 7653 96597-0
+49 7653 96597-99
info@testo-sensor.de
www.testo-sensor.de

Deutsche Bank AG Freiburg | BIC: DEUTDE6FXXX
IBAN: DE32 6807 0030 0184 3333 00
Sparkasse Hochschwarzwald | BIC: SOLADES1HSW
IBAN: DE80 6805 1004 0004 5119 03

Managing Directors:
Prof. Burkart Knospe, Martin Arndt
Amtsgericht Freiburg HRB 706025
VAT ID.: DE274417683

Technical drawing	All dimensions in mm
Side view	Connector

All dimensions in mm

Pin assignment input and output		
Input	Pt1000 fest verbaut Pt1000 fixed mounted	Output

Mounting	
	<p>Measurement errors can occur due to heat dissipation to the environment. To keep these as small as possible, we recommend immersing the protection sleeve of your temperature probe as deeply as possible in the medium to be measured during installation. The optimum installation depth should be 10-15 times the Ø of the protection sleeve. Please make sure that you have sufficient space so that you can remove the probe again if necessary.</p> <p>Mounting by using an immersion sleeve (4): Please make sure that the Ø and the length of the immersion sleeve are chosen according to the installation situation, so that the minimum immersion depth can be reached. Since the probe is not inserted directly into the medium, but via the immersion sleeve, the response times are somewhat slower. The probe should be selected in such a way that the protection sleeve touches the bottom of the immersion sleeve and that the air cushion around the protection sleeve is as small as possible. The use of thermal conduction paste can improve the response times.</p>

RL / KS / 21.07.2023

Testo Sensor GmbH

Testo-Straße 1
D-79853 Lenzkirch
+49 7653 96597-0
+49 7653 96597-99
info@testo-sensor.de
www.testo-sensor.de

Deutsche Bank AG Freiburg | BIC: DEUTDE6FXXX
IBAN: DE32 6807 0030 0184 3333 00
Sparkasse Hochschwarzwald | BIC: SOLADES1HSW
IBAN: DE80 6805 1004 0004 5119 03

Managing Directors:
Prof. Burkart Knospe, Martin Arndt
Amtsgericht Freiburg HRB 706025
VAT ID.: DE274417683

Testo Sensor GmbH
Testo-Strasse 1
79853 Lenzkirch

Telefon: +49 7653 96597 0
Telefax: +49 7653 96597 99
E-Mail: info@testo-sensor.de



Handelsregister: HRB 706025
Registergericht: Amtsgericht Freiburg

RL / KS / 21.07.2023

Alle Rechte vorbehalten. Änderungen der Unterlagen sind nicht gestattet.
Technische Änderungen sind vorbehalten.
Vor Beginn aller Arbeiten lesen Sie bitte die Betriebsanleitung.

Testo Sensor GmbH

Testo-Straße 1
D-79853 Lenzkirch

 +49 7653 96597-0
 +49 7653 96597-99
 info@testo-sensor.de
 www.testo-sensor.de

Deutsche Bank AG Freiburg | BIC: DEUTDE6FXXX
IBAN: DE32 6807 0030 0184 3333 00
Sparkasse Hochschwarzwald | BIC: SOLADES1HSW
IBAN: DE80 6805 1004 0004 5119 03

Managing Directors:
Prof. Burkart Knospe, Martin Arndt
Amtsgericht Freiburg HRB 706025
VAT ID.: DE274417683